

ZEPHYR 27" FHD

Gaming monitor

FOR

PC



USER MANUAL
KONIX
LOG INTO YOUR DREAMS

Notices

Before using this product, please read this User Manual carefully and keep it well.

- Keep the monitor away from water sources or damp places, such as bath rooms, kitchens, basements and swimming pools.
- Make sure the monitor is placed on a flat surface. If the monitor falls down, it may cause human injury or device damage.
- Store and use the monitor in a cool, dry and well ventilated place, and keep it away from emissions and heat sources.
- Do not cover or block the vent hole in the rear casing and do not use the product on a bed, sofa, blanket or similar objects.
- The range of the supply voltage of the monitor is printed on the label on the rear casing. If it is impossible to determine the supply voltage, please consult the distributor or local power company.
- If the monitor will not be used for a long period, please cut off the power supply to avoid electric shock in rainy days and damage due to abnormal supply voltage.
- Please use a reliable earthing socket, do not overload the socket, or it may cause fire or electric shock.
- Do not put foreign matters into the monitor, or it may cause short circuits resulting in fire or electric shock.
- Do not disassemble or repair this product by yourself to avoid electric shock. If faults occur please contact the after-sales service directly.
- Do not pull or twist the power cable by force.
- There is a polarizer layer (not a protective film) on the surface of the screen. Do not peel it off or the product may be damaged and the warranty will be invalid.

HDMI™

HIGH-DEFINITION MULTIMEDIA INTERFACE

The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Product Introduction

Packing list

- Please check that the package of the monitor contains all parts. If any part is lost, please contact the distributor.
- The color and shape of parts may vary with models. Figures in this User Manual are for reference only.
- Included cables may vary with models, Figures in this User Manual are for reference only.



Monitor x1



DP Cable x1



Stand x1



Power Adapter x1



Base x1



User Manual x1




Screws x1


Installation

Installation of base


1. Take out the stand and the base, align the base with the stand, and then tighten the screws at the bottom of the base.

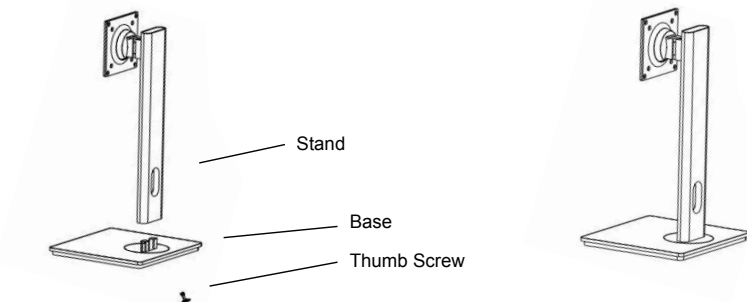

2. Use the assembled bracket to insert the rear shell rotation, and hear a "da" sound, which means that it is buckled in place. (Installation when The display needs to be placed flat in EPS foam)



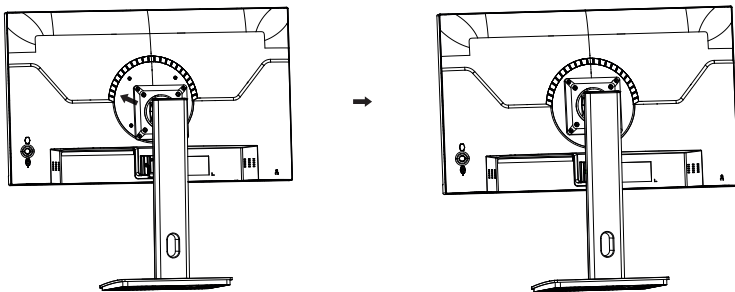


3. Installation process is finished.



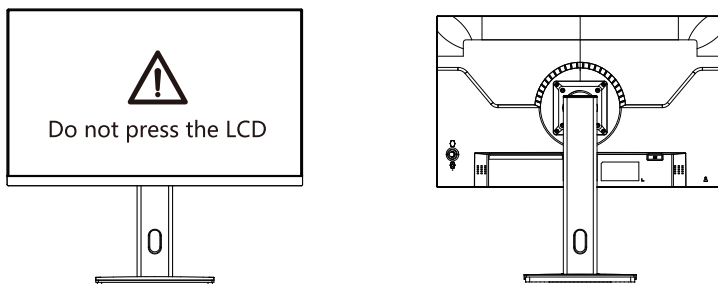


 Note: Do not press the screen during installation, to avoid damage to the screen.


Adjusting the monitor

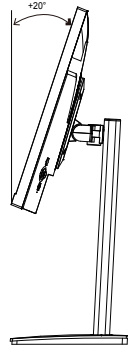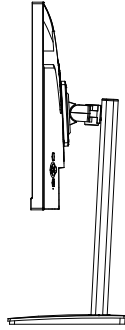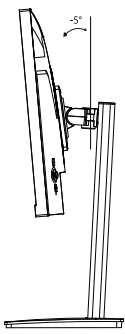


Tilting angle $-5^{\circ}(\pm 2^{\circ})$ - $+20^{\circ}(\pm 2^{\circ})$

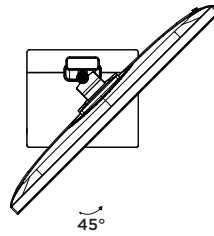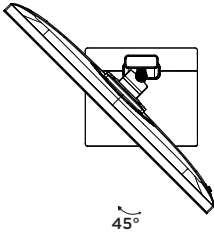

Horizontal rotation: $\pm 45^{\circ}$

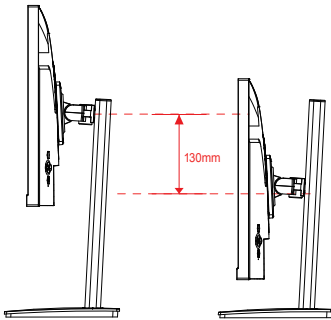


Lifting: 130mm

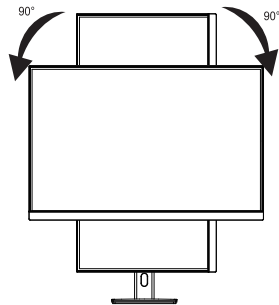

pivot: Left and right $0-90^{\circ}\pm 3$

Usage


Description of buttons

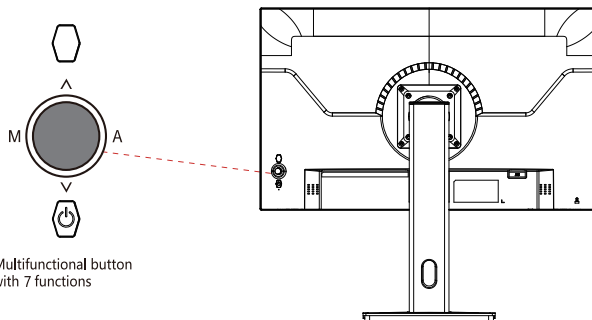

Usage of multifunction button control key


	Shortcut Buttons	Reticle function
M	Menu	Activate and confirm the OSD Menu
^	FPS button	Adjust the parameters upwards in the menu
∨	Signal Switch	Adjust the parameters down in the menu
A	Brightness button	When in the menu, go back or log out
●	Confirm Button	Menu / Confirm button
	Power Button	Turn the display on or off

Description of indicators

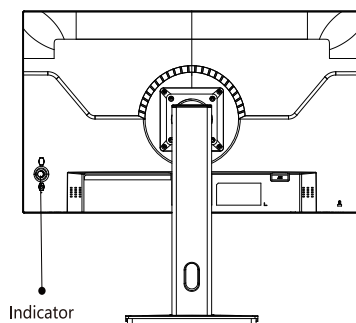

Indicator: Blue light indicates the power is on and the monitor runs normally. Red light indicates no video source and no signal detected or low voltage. Please make sure your computer is turn on and all video cables are fully plugged in.

Cable Connection

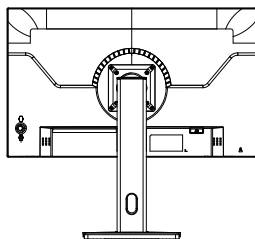


* The bottom interface configuration at the back of the monitor varies with products.

* Note: If the power cable or signal cable is damaged, it must be replaced with specific cables or special components purchased from the manufacturer or after-sales department.

HDMI interface




Use the HDMI cable to connect the HDMI-in interface of the monitor and the HDMI-out interface of a PC.

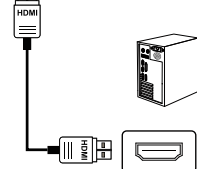

DP interface




Use the DP cable to connect the DP IN interface of the product to the DP OUT interface of a PC.

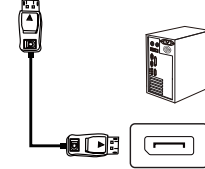

AUDIO OUT




Connect audio devices such as earphones to the AUDIO OUT interface.

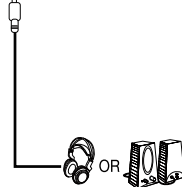

Power Adapter




Please connect the power adapter to the DC IN interface of a monitor, and plug the power cable into the power socket.



OSD menu

Menu description

- The color and shape of the OSD menu of the actual monitor may be slightly different from manual.
- Specifications of the OSD menu may change with improvements of functions without prior notice.
- The screen display (OSD) menu can be used to adjust the settings of the monitor and is shown on the screen after the monitor is powered on and the **M** button is pressed.

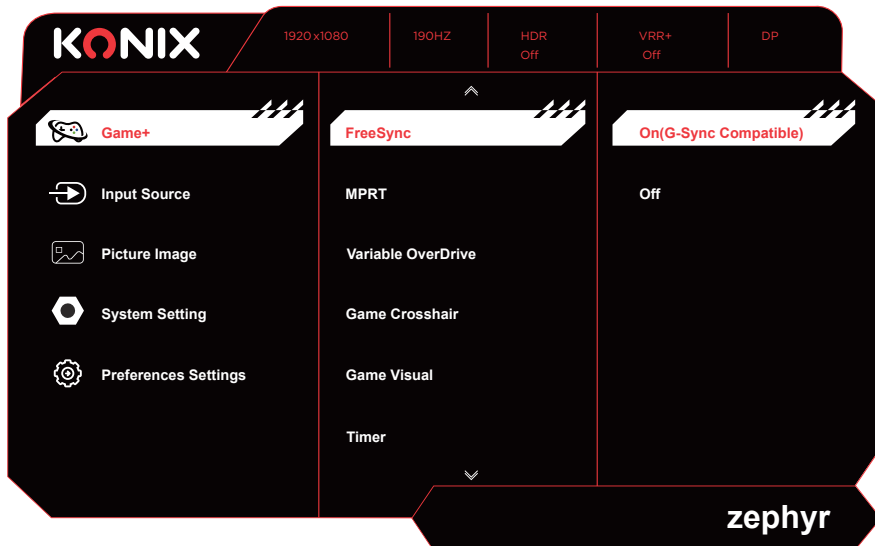

The functions of the monitor vary with models, and the functions in this manual are for reference.

Game+	FreeSync	On(G-Sync Compatible)/Off
	MPRT	On/Off
	Variable OverDrive	Off/High/Medium/Low
	Game Crosshair	Off/Mode 1/Mode 2/Mode 3
	Game Visual	Standard/Movie/RTS/RPG/FPS/MOBA/sRGB/Reader
	Timer	Off/30/50/60/90
	Game Light	On/Off
	VRR	On/Off
	FPS Counter	On/Off
	Shadow boost	0-100
Input Source	DP / HDMI	
Picture Image	Brightness	0-100
	Contrast	0-100
	HDR	On/Off
	DCR	On/Off
	Gamma	1.8/2.0/2.2/2.4/2.6
	Color Temperature	Normal/Warm/Cool/User
	Sharp pixel	0-100
	Low Blue Light	0-100
	Hue	0-100
System Setting	Saturation	0-100
	Language	6 countries
	Audio	Volume/Mute
	Menu settings	OSD Transparency/OSD Time Out/OSD H-Position/OSD V-Position/OSD Rotation
	Aspect Ratio	wide screen/4:3
	Monitor Info	Model/Color depth/Color mode/RGB/Game Visual/FW
Preferences settings	Reset	
	ECO Mode	On/Off
	Power Indicator	On/Off
Shortcut setting	UP Key(FPS Counter)/DownKey(Input)/Exit Key(Game Crosshair) List: Brightness/Contrast/Game Crooshair/Game Visual/FPS Counter/Volume/Input	

TROUBLE SHOOTING

If your monitor cannot work normally, please refer to the following methods for common problems quickly. If you need assistance, please call the dealer where you purchased the monitor.

A. There is no screen image and no light on.

Please check whether the power cord is fully connected to the monitor and power socket, and whether the display is in power saving mode.

B. There is no screen image and the light is red.

Please check whether the display card of PC is loose, and check the connection between signal cables and the display.

C. The display is not clear or the image is too large or too small.

Enter the OSD image adjustment menu, and then select "Auto Adjust" to allow the display to adjust automatically for optimal display.

D. The image is too light or too dark.

Enter the OSD brightness adjustment menu, and then select "Up/Down " to adjust the brightness and contrast to optimum.

E. The screen is overheated.

Please keep at least 5cm around the display for ventilation, and do not place anything on the monitor.

F. Dark display when booting.

The monitor needs time to adjust the lighting and colors due to temperature difference.

G. The image is distorted, flashes and shakes.

Check the settings of the computer and choose the proper resolution.

H. The color is abnormal.

Check the connection of signal cable, if there is any curved or broken pin, please replace it. Enter the OSD Color adjustment menu to set the display color to the optimum.

Notes d'information

Avant d'utiliser ce produit, veuillez lire attentivement ce manuel d'utilisation et le conserver soigneusement.

- Gardez le moniteur loin des points d'eau ou des endroits humides, tels que les salles de bains, les cuisines, les sous-sols humides et les piscines.
- Assurez-vous que le moniteur est placé sur une surface plane. Si le moniteur tombe, cela peut causer des blessures humaines ou des dommages au dispositif.
- Stockez et utilisez le moniteur dans un endroit frais, sec et bien ventilé, éloignez-le des émissions et des sources de chaleur.
- Ne couvrez pas ou ne bloquez pas le trou de ventilation dans le boîtier arrière et n'utilisez pas le produit sur un lit, un canapé, une couverture ou des objets similaires.
- La plage de tension d'alimentation du moniteur est imprimée sur l'étiquette située sur le boîtier arrière. S'il est impossible de déterminer la tension d'alimentation, veuillez consulter le distributeur ou la compagnie électrique locale.
- Si le moniteur ne va pas être utilisé pendant une longue période, veuillez couper l'alimentation pour éviter les chocs électriques par temps de pluie et les dommages dus à une tension d'alimentation anormale.
- Utilisez une prise de terre fiable, ne surchargez pas la prise, sinon cela pourrait provoquer un incendie ou un choc électrique.
- Ne mettez pas d'objets étrangers dans le moniteur, sinon cela pourrait provoquer des courts-circuits entraînant un incendie ou un choc électrique.
- Ne démontez pas ou ne réparez pas ce produit vous-même pour éviter les chocs électriques. En cas de panne, veuillez contacter directement le service après-vente.
- Ne tirez pas ou ne tordez pas le câble d'alimentation de force.
- Il y a une couche polarisante (pas un film de protection) sur la surface de l'écran. Ne l'enlevez pas, sinon le produit pourrait être endommagé et la garantie deviendrait invalide.

HDMI™

HIGH-DEFINITION MULTIMEDIA INTERFACE

Les marques adoptées HDMI, HDMI High-Definition Multimedia Interface (interface multimédia haute définition HDMI), l'apparence commerciale HDMI ainsi que les logos HDMI sont des marques ou des marques déposées de HDMI Licensing Administrator, Inc. aux États-Unis et dans d'autres pays.

Introduction

Liste des éléments inclus

- Veuillez vérifier que le colis du moniteur contient toutes les pièces. Si une pièce est manquante, veuillez contacter le distributeur.
- La couleur et la forme des pièces peuvent varier selon les modèles. Les figures dans ce manuel d'utilisation sont fournies à titre de référence uniquement.
- Les câbles inclus peuvent varier selon les modèles. Les figures dans ce manuel d'utilisation sont fournies à titre de référence uniquement.



Moniteur x1



Câble DP x1



Support x1



Adaptateur secteur x1



Base x1



Manuel de l'utilisateur x1




Vis x1


Installation

Installation de la base


1. Sortez le support et la base, alignez la base avec le support, puis serrez les vis au bas de la base.

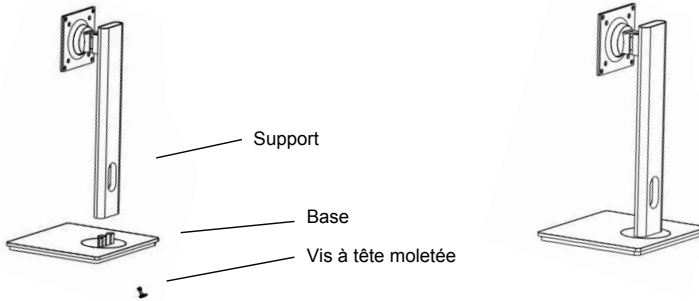

2. Alignez le support avec le trou VESA sur le moniteur et insérez-le.

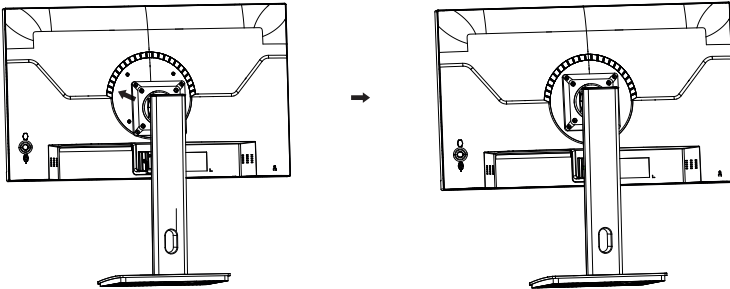


3. Le processus d'installation est terminé.

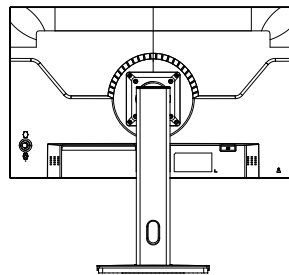


⚠ Remarque : Ne pas appuyer sur l'écran pendant l'installation pour éviter d'endommager l'écran.


Ajuster le moniteur

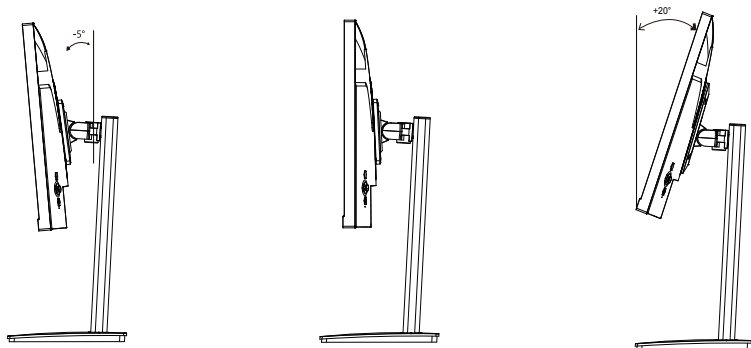


Angle d'inclinaison : $-5^{\circ} (\pm 2^{\circ})$ à $+20^{\circ} (\pm 2^{\circ})$

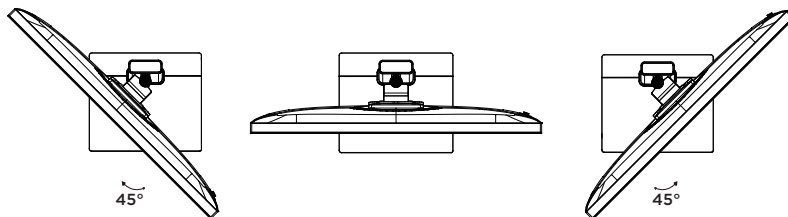

Rotation horizontale : $\pm 45^{\circ}$

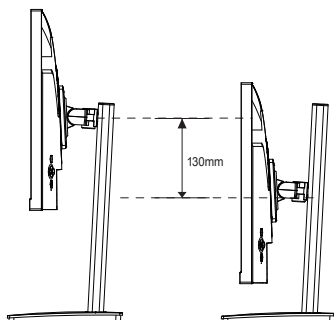


Réglage en hauteur : 130 mm

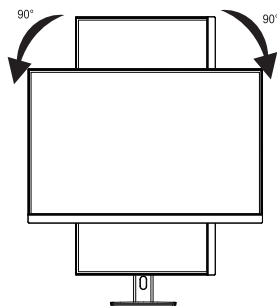

Pivot : gauche et droite $0-90^{\circ} \pm 3^{\circ}$

Utilisation


Description des boutons

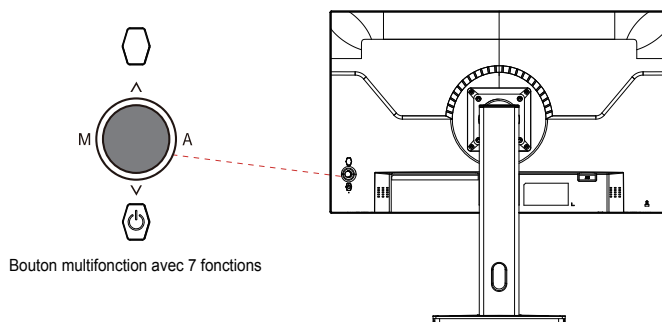

Utilisation de la touche de commande multifonctionnelle


	Boutons de raccourci	Fonction réticule
	Menu	Activer et confirmer le menu OSD
	Bouton FPS	Ajuster les paramètres vers le haut dans le menu
	Changement de source	Ajuster les paramètres vers le bas dans le menu
	Bouton luminosité	Dans le menu, retour ou quitter
	Bouton de confirmation	Bouton de confirmation
	Bouton d'alimentation	Allumer ou éteindre l'écran

Description des indicateurs

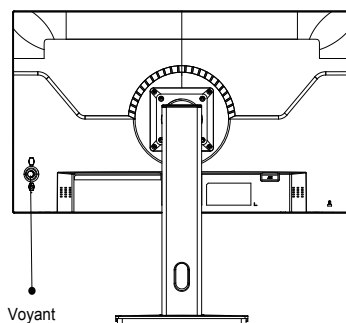


Voyant : La lumière bleue indique que l'alimentation est allumée et que le moniteur fonctionne normalement. La lumière rouge indique qu'aucune source vidéo n'est détectée ou qu'aucun signal n'est détecté ou que la tension est faible. Assurez-vous que votre ordinateur est allumé et que tous les câbles vidéo sont correctement branchés.

Connexion des câbles

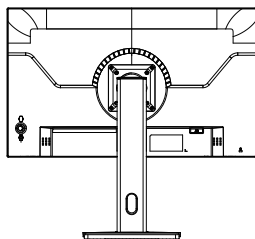


* L'interface du panneau arrière peut varier selon le modèle du moniteur
 * Remarque : Si le câble d'alimentation ou le câble de signal est endommagé, il doit être remplacé par des câbles spécifiques ou des composants spéciaux achetés auprès du fabricant ou du service après-vente.

Interface HDMI

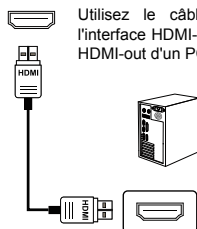


Utilisez le câble HDMI pour connecter l'interface HDMI-in du moniteur et l'interface HDMI-out d'un PC.

DP interface

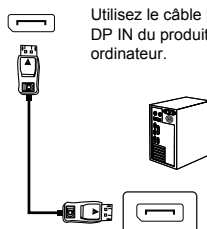


Utilisez le câble DP pour connecter l'interface DP IN du produit à l'interface DP OUT d'un ordinateur.

Sortie audio

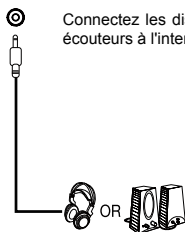

Connectez les dispositifs audio tels que les écouteurs à l'interface AUDIO OUT.

Adaptateur secteur




Veuillez connecter l'adaptateur secteur à l'interface DC IN d'un moniteur et brancher le câble d'alimentation dans la prise de courant.

Menu OSD

Description du menu

- La couleur et la forme du menu OSD du moniteur réel peuvent être légèrement différentes du manuel.
- Les spécifications du menu OSD peuvent changer avec l'amélioration des fonctions
- Le menu d'affichage à l'écran (OSD) peut être utilisé pour ajuster les paramètres du moniteur et s'affiche à l'écran après que le moniteur est allumé et que la touche **M** soit pressée.

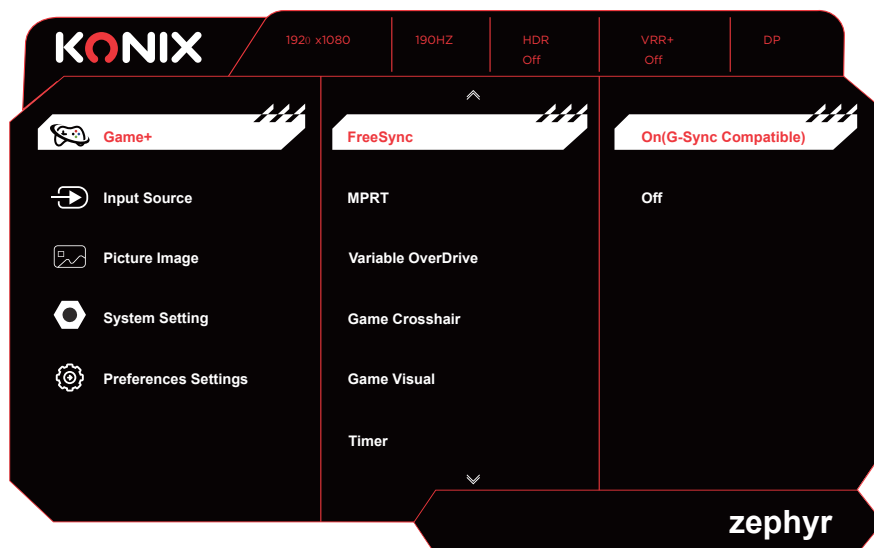

Les fonctions du moniteur varient selon les modèles, et les fonctions dans ce manuel sont données à titre de référence.

Game+	FreeSync	On(G-Sync Compatible)/Off
	MPRT	On/Off
	Variable OverDrive	Off/High/Medium/Low
	Game Crosshair	Off/Mode 1/Mode 2/Mode 3
	Game Visual	Standard/Movie/RTS/RPG/FPS/MOBA/sRGB/Reader
	Timer	Off/30/50/60/90
	Game Light	On/Off
	VRR	On/Off
	FPS Counter	On/Off
	Shadow boost	0-100
Input Source	DP / HDMI	
Picture Image	Brightness	0-100
	Contrast	0-100
	HDR	On/Off
	DCR	On/Off
	Gamma	1.8/2.0/2.2/2.4/2.6
	Color Temperature	Normal/Warm/Cool/User
	Sharp pixel	0-100
	Low Blue Light	0-100
	Hue	0-100
System Setting	Saturation	0-100
	Language	6 country
	Audio	Volume/Mute
	Menu settings	OSD Transparency/OSD Time Out/OSD H-Position/OSD V-Position/OSD Rotation
	Aspect Ratio	wide screen/4:3
	Monitor Info	Model/Color depth/Color mode/RGB/Game Visual/FW
Preferences settings	Reset	
	ECO Mode	On/Off
	Power Indicator	On/Off
Preferences settings	Shorcut setting	UP Key(FPS Counter)/DownKey(Input)/Exit Key(Game Crosshair) List: Brightness/Contrast/Game Crosshair/Game Visual/FPS Counter/Volume/Input)

DÉPANNAGE

Si votre moniteur ne fonctionne pas normalement, veuillez-vous référer aux méthodes suivantes pour des problèmes courants rapidement. Si vous avez besoin d'aide, veuillez appeler le revendeur où vous avez acheté le moniteur.

A. Aucune image à l'écran et aucune lumière.

Veuillez vérifier si le cordon d'alimentation est correctement connecté au moniteur et à la prise de courant, et si l'affichage est en mode économie d'énergie.

B. Aucune image à l'écran et la lumière est rouge.

Veuillez vérifier si la carte d'affichage du PC est desserrée, et vérifiez la connexion entre les câbles de signal et l'affichage.

C. L'affichage n'est pas clair ou l'image est trop grande ou trop petite.

Accédez au menu de réglage de l'image OSD, puis sélectionnez "Réglage automatique" pour que l'affichage s'ajuste automatiquement de manière optimale.

D. L'image est trop claire ou trop sombre.

Accédez au menu de réglage de la luminosité OSD, puis sélectionnez "Haut/Bas" pour ajuster la luminosité et le contraste à l'optimum.

E. L'écran surchauffe.

Veuillez laisser au moins 5 cm d'espace autour de l'écran pour assurer une ventilation correcte et ne rien poser sur le moniteur.

F. Affichage sombre au démarrage.

Le moniteur a besoin de temps pour ajuster l'éclairage et les couleurs en raison de la différence de température.

G. L'image est déformée, clignote et tremble.

Vérifiez les paramètres de l'ordinateur et choisissez la résolution appropriée.

H. La couleur est anormale.

Vérifiez la connexion du câble de signal, s'il y a des broches tordues ou cassées, veuillez les remplacer. Accédez au menu de réglage de la couleur OSD pour régler la couleur d'affichage à l'optimum.



ENERG



KONIX

ZEPHYR




21 kWh/1000h

ABCDE**FG**



25 kWh/1000h

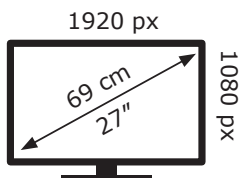

2019/2013



Regulatory compliance information

- (EN)** If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)
- (FR)** Si dans l'avenir vous deviez vous débarrasser de ce produit veuillez remarquer que: Les déchets électriques ne doivent pas être jetés avec les déchets ménagers. Veuillez recycler les produits dans une déchetterie. Consulter votre responsable local ou votre revendeur pour un conseil sur le recyclage. (Directive sur les déchets des équipements électriques et électroniques)

Hereby, Innelec Multimedia S.A. declares that this product complies with the applicable European directives and regulations, in particular Directive 2014/30/EU (EMC), Directive 2014/35/EU (Low Voltage) and Directive 2011/65/EU (RoHS). The full EU Declaration of Conformity is available at: www.innelec.com and www.konix-interactive.com

Par la présente, Innelec Multimedia S.A. déclare que ce produit est conforme aux directives et règlements européens applicables, notamment la directive 2014/30/UE (CEM), la directive 2014/35/UE (Basse Tension) et la directive 2011/65/UE (RoHS). La déclaration UE de conformité complète est disponible à l'adresse : www.innelec.com et www.konix-interactive.com



©2026 Konix. Innelec Multimedia - Konix, 45 rue Delizy, 93692 Pantin Cedex, FRANCE. Konix brand is a trademark of Innelec Multimedia S.A. All other trademarks are the property of their respective owners. All rights reserved. Made in PRC.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

©2026 Konix. Innelec Multimedia - Konix, 45 rue Delizy, 93692 Pantin Cedex, FRANCE. La marque Konix est une marque déposée par Innelec Multimedia S.A. Toutes les autres marques commerciales appartiennent à leurs propriétaires respectifs. Tous droits réservés. Fabriqué en RPC.

Les termes HDMI et High-Definition Multimedia Interface ainsi que le logo HDMI sont des marques commerciales et des marques déposées de HDMI Licensing Administrator, Inc. aux États-Unis et dans les autres pays.

